

# INSTALLATION INSTRUCTIONS FOR "A" SERIES RECESSED MODELS

## WARNING:

DISCONNECT POWER BEFORE SERVICING  
DESUNA LA ELECTRICIDAD ANTES DE HACER REPARACIONES

**Note:** Touchless dryers are not recommended for hair dryer use.

### 1. Removal of cover:

- Loosen tamper-proof screws using wrench supplied, turn **clockwise** (do not remove). Located under bottom intake vent.
- To remove, place a hand on each side of cover and lift upward, then pull off.

2. Remove dryer assembly from the wall box by unscrewing four 1/4" - 20 hex mounting bolts from the corners of the assembly plate.

3. Dryers should be placed at least 2 feet (61 cm) apart and at least 12" (30 cm) from washbasin. Do not install dryer over washbasin. Automatic dryers should be at least 18" (46 cm) above any projection that may interfere with the operation of the automatic sensor.

4. Suggested wall opening 11" wide x 9-1/16" high x 3-1/2" minimum depth. Wall opening should be framed on four sides, with opening to allow for easy access to electrical conduit.

5. Suggested mounting heights from floor to bottom of dryer:

	<b>MEN</b>	<b>WOMEN</b>	<b>CHILDREN</b> (depends on age)	<b>DISABLED</b>
"A" Hand Dryer...	42" (107 cm)	40" (102 cm)	30-40" (76-102 cm)	34" (86 cm)

6. Install recess box into frame using #10 wood screws (8 required).

7. Place dryer assembly into wall box and attach with four 1/4" - 20 bolts and washers furnished.


8. Run service wire to the dryer location and connect to the terminal block. **IMPORTANT:** All units must be supplied with 3 wire service. Use No. 12 wire or larger, as required by local electrical code. The ground wire must be connected to the dryer backplate. Unit must be installed by a qualified licensed electrician.

### CONNECT TO A DEDICATED CIRCUIT NOT TO EXCEED 20 AMPS.

Dryers located in shower rooms or other wet locations should be equipped with ground fault interrupter(s).

9. **Carefully** replace the cover using tamper-proof bolts supplied, **turn counter clockwise** (do not over tighten). Be careful not to damage circuit board or sensor.

10. A bead of silicone should be placed around outer edge of cover for protection.

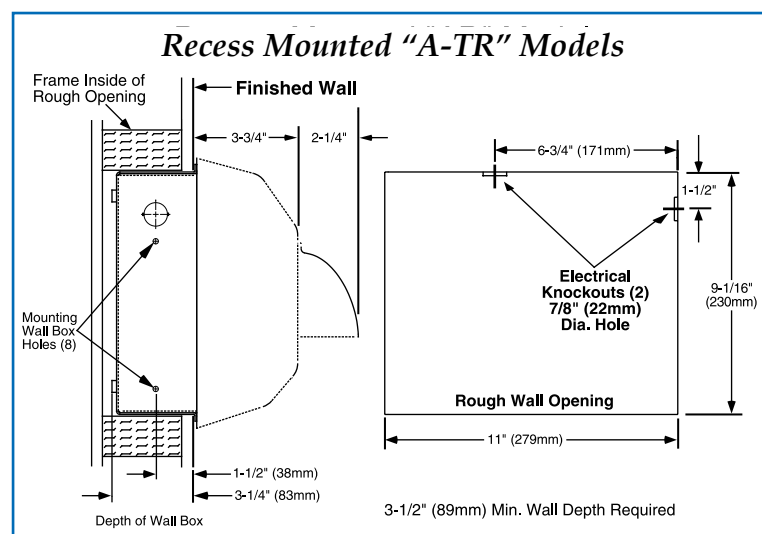

# READ ME FIRST...

WHEN INSTALLING THE COVER OF AN "A-TR" SERIES RECESSED DRYER.

1. PUSH COVER TOWARD WALL AND,
2. TURN TAMPER PROOF SCREWS COUNTER CLOCKWISE

This is done to prevent the bottom of the cover from pulling too far away from the wall causing an alignment problem.

 **american dryer**  
12932 Farmington Rd, Livonia, MI 48150  
Ph (734) 421-2400 • FAX (734) 421-5580  
[www.americandryer.com](http://www.americandryer.com) • [sales@americandryer.com](mailto:sales@americandryer.com)

**SEE REVERSE FOR FULL INSTRUCTIONS**



**SEE REVERSE FOR FULL INSTRUCTIONS**